



Login

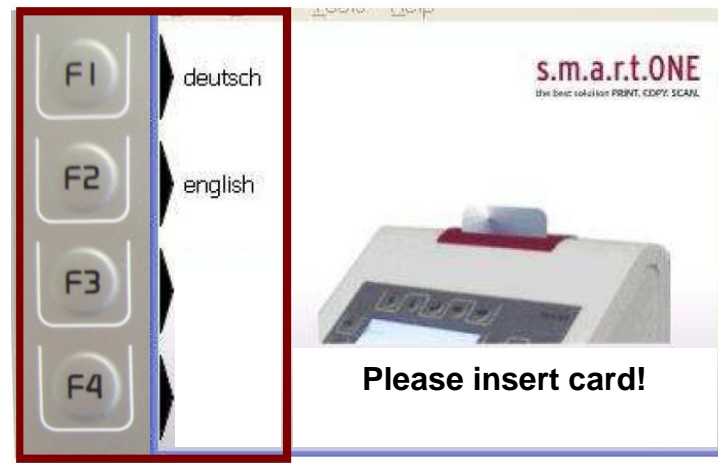

- Slide the thoska-card into the card slot without pressure.

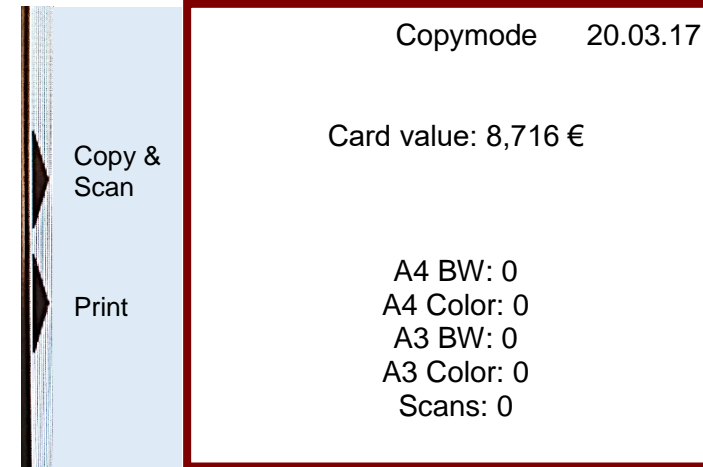



- Choose **Copy & Scan**.
- The card value is displayed.




- For card returning press the **<END>**-button.

A minimum credit of € 0.50 is required.




USB/SD-Card-Print (PDF, JPG, TIFF, XPS)

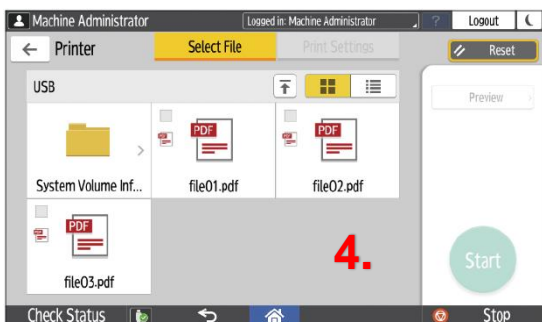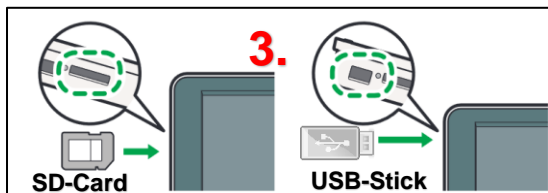

1. Press [Print/Scan] on the Home screen.
2. Press [Print from Storage Device].
3. Insert the external media and choose it on the screen.
4. Select the file to print.
5. Make any [Print Settings].
6. Press the green **START**-button to start printing.

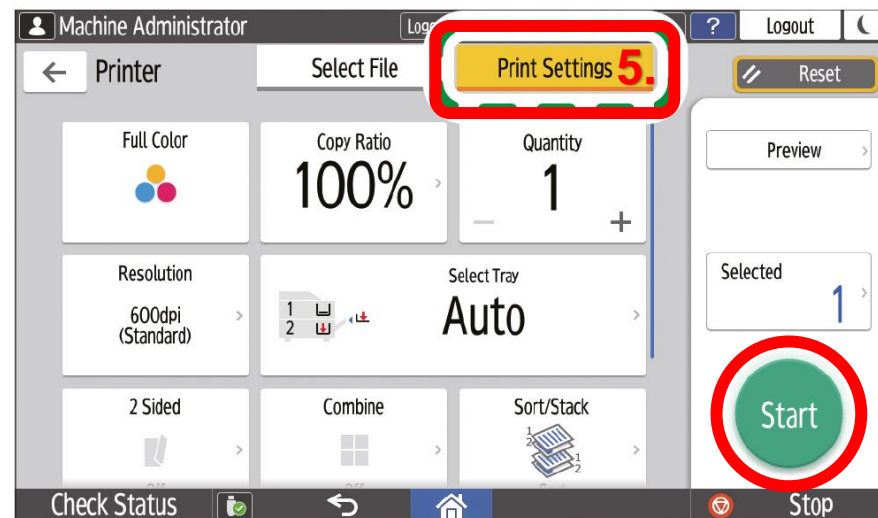

USB/SD-Card-Scan (PDF, JPG, TIFF, XPS)

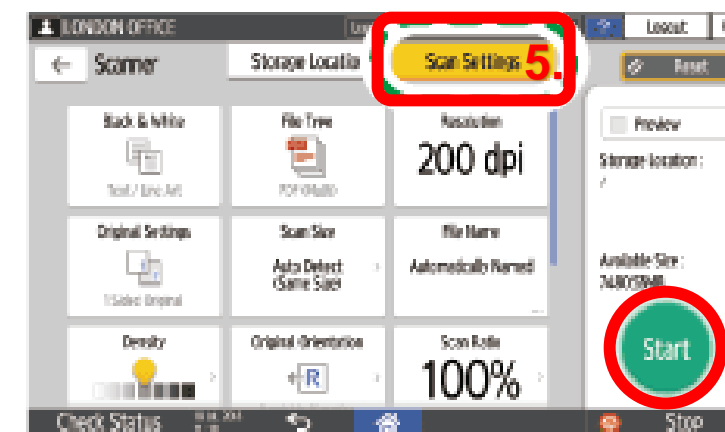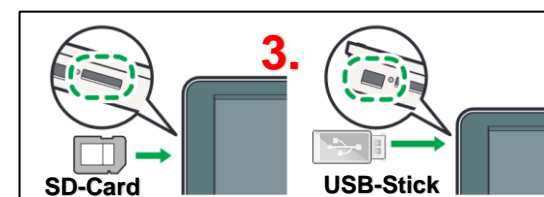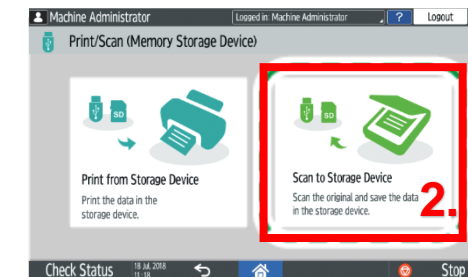

1. Press [Print/Scan] on the Home screen.
2. Press [Scan to Storage Device].
3. Insert the external media and choose it on the screen.
5. Make any [Scan Settings].
6. Press the green **START**-button to start scanning.

Manual

USB/SD-Card-Print and USB/SD-Card-Scan